

CarAlarm

TIPO DI AUTOVETTURA ED ANNO DI PRODUZIONE

SCHEDA NUMERO

FIAT DOBLO 2007

11.70

LOCATION OF THE CAR ALARM CONTROL UNIT

Compact control units and sirens: place in the bonnet driver side on the support of battery for version with ABS, place on the ABS for another version.

Modular control units and accessories: Place under the dashboard.

CAR ALARM SUPPLY

Positive: Connect at **Red/Black** (pos. n°7) wire in the Green 20-pin connector place in the rear part of fuse box.

Negative: Connect at **Black** (pos. n°10) wire in the Green 20-pin connector place in the rear part of fuse box.

IMMOBILIZER

Starter Motor:

Cut the **Brown** wire located directly in the block key.

POSITIVE IGNITION KEY (+15)

Connect at **Blue** (pos. n°11) wire in the Green 20-pin connector place in the rear part of fuse box.

CENTRAL DOOR LOCKING (Connection with RF remote controlled alarm)

Negative Type control.

Connect at **White/Brown** (pos. n°34) wire for closing and **Light Blue/Blue** (pos. n°24) wire for opening in the Black 40-pin connector place in the front part of fuse box.

ARMING OF PASSIVE TYPE ALARM (Connection with alarm armed by vehicle's original remote control)

Follow the method of connections in **INSTALLATION FILE 11.70.1**

DIRECTION INDICATORS

Connect at **Green** (pos. n°13) (lateral right), **Orange/Black** (pos. n°3) (rear right), **Orange/Blue** (pos. n°2) (lateral left), **Red/Green** (pos. n°12) (rear left.) wire in the Black 40-pin connector place in the front part of fuse box; and at **White/Black** (pos. n°39) (front right) and **Orange/White** (pos. n°38) (front left) wire in the Light Blue 40-pin connector in the front part of fuse box.

Separate the lines with a 6 diodes.

ONLY FOR DISPOSED ALARM:

Blinker Control: Connect at **Red/Yellow** (pos. n°34) wire in the Light Blue 36-pin connector place in the rear part of fuse box.

Feedback: Connect at **Orange/Black** (pos. n°3) wire in the Black 40-pin connector place in the front part of fuse box.

After completing connections, set the product for direct blinker control (select "B" for function 18 in the operating functions, refer to the table in the installers manual)

DOOR PROTECTION

Connect at **White/Pink** (pos. n°8), **White/Brown** (pos. n°25), **White/Purple** (pos. n°16) and **White/Purple** (pos. n°26) wire located in the Black 40-pin connector in the front part of fuse box.

N.B.: Use the dedicated module with a X4578A01 code.

BONNET PROTECTION

Bonnet: Fit the switch provided

Boot: Connect at **Red/Green** (pos. n°36) wire in the Black 40-pin connector place in the front part of fuse box.

CarAlarm

TIPO DI AUTOVETTURA ED ANNO DI PRODUZIONE

SCHEDA NUMERO

FIAT DOBLO 2007

11.70.1

FITTING ASSEMBLY ALARM TOP PLIP / MULTI PLIP

After completing connections, set the control unit for FIAT "positive polarity" type controls (see LINKING UP THE VEHICLE CAN in the fitting instructions for details of this procedure) or use the Car Alarm Programmer.

FUNCTION	COLOUR CABLE ALARM	COLOUR CABLE CAR	POSITIONING ON THE CAR	
Arming Control	RED/BLACK YELLOW/BLUE	GREEN	POS. 13	Located in the Black 40-pin connector in front of fuse box.
Disarming Control	RED/WHITE GREEN/BLUE	Not connect		
Inhibition	LIGHT BLUE/YELLOW WHITE/BLUE	Not connect		
Inhibition	RED/YELLOW RED/YELLOW	Not connect		

