

CarAlarm

TIPO DI AUTOVETTURA ED ANNO DI PRODUZIONE

BMW X6 2009

SCHEDA NUMERO

6.45

LOCATION OF THE CAR ALARM CONTROL UNIT

Compact control units and sirens: place in the bonnet on the wheel arch driver side among shock absorber and cooling liquid.

Modular control units and accessories: place under the dashboard.

CAR ALARM SUPPLY

Positive: connect at **Red/Blue** (pos. n° 34) wire of Black 41-pin connector of CAS central unit at left of steering column. (see image 1)

Negative: Connect directly to the battery's negative terminal.

IMMOBILISER

Starter Motor: Cut the **Black** or **Black/Purple** (pos. n°22) wire of Black 41-pin connector of CAS central unit at left of steering column. (see image 1)

ODOMETER

Information not available.

POSITIVE IGNITION KEY (+15)

Connect at **Green/White** (pos. n° 7) wire of Black 41-pin connector of CAS central unit at left of steering column. (see image 1)

CENTRAL DOOR LOCKING (Connection remote controlled alarm)

Information not available.

ARMING OF PASSIVE TYPE ALARM (Connection with alarm armed by vehicle's original remote control)

Follow the method of connections in **INSTALLATION FILE 6.45.1**

DIRECTION INDICATORS

ONLY FOR H.P.B. ALARM

Blinker Control (negative control) : Connect at **Brown/Blue** (Pos. n° 18) wire in the Black 26-pin connector on the module headlamp central unit in the trouser hem binding driver side. (see image 2)

Feedback : Connect at **Blue/Brown** (Pos. n° 40) wire in the Black 51-pin connector (the first in high) on the module headlamp central unit in the trouser hem binding driver side. (see image 2)

DOOR PROTECTION

If you fit the dedicated alarm, the door and boot switches are normally detected by the CAN line.

BONNET/BOOT PROTECTION

Bonnet: Fit the switch provided.

Boot: **If you fit the dedicated alarm, the door and boot switches are normally detected by the CAN line.**

ELECTRIC WINDOWS

The windows are lifted by means of the comfort function using the vehicle's original remote control.

CarAlarm

TIPO DI AUTOVETTURA ED ANNO DI PRODUZIONE

BMW X6 2009

SCHEDA NUMERO

6.45.1

FITTING INSTRUCTIONS FOR TOP CAN/MULTICAN ALARM

After completing connections, set the control unit for BMW type controls (see LINKING UP THE VEHICLE CAN in the fitting instructions for details of this procedure) or use the Car Alarm Programmer.

Function	Colour Cable Alarm	Colour Cable Car	Positioning on the Car	
Line CAN H	Black/Red	Orange/Green	Pos.35	Black 41-pin connector in the CAS central unit at left of steering column. (see image 1)
Line CAN L	Black/Purple	Green	Pos.26	

ATTENTION: Verify that the key of starting is drawn out from the notepad before connecting the connector of the plant of alarm.

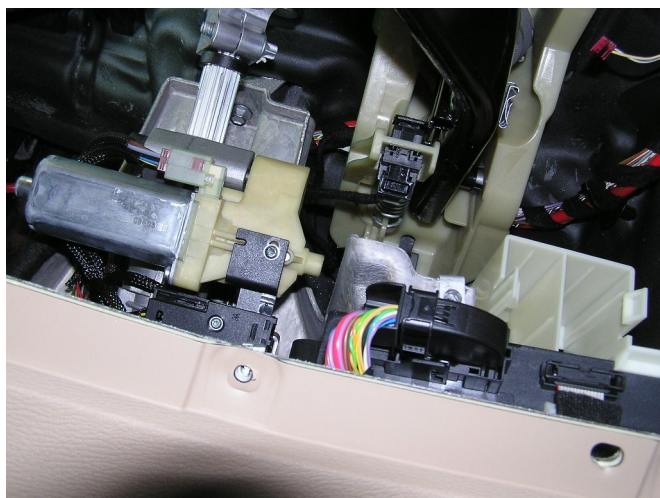


Image 1



Image 2